

## 1 Functions and characteristics

SLJ-B wheel manual test stand, specially designed to match SH/SP series, is applied in various industry and scientific research organization for testing, such as tension/compression test, insertion/withdraw test and fracture Test. Its use T-screw transfer, screw design with a ruler. It is manual operation, sample and stable, both vertical and horizontal using.

- Dimension:  
L×W×H (mm) 154×240×467
- Capacity:500N Stroke:150mm
- Ruler distance:150mm
- Resolution:0.01mm
- Applied with(Purchase additionally):  
SN/SH/SP series (Sensor inside) push pull force gauge, various clamps.

## 2 Structure




SLJ-B Wheel manual test stand


Note:SH push pull force gauge, SJ-003 clamp should purchase additionally.

## 3 The installation of the test stand


1. Put the test stand on level working table, use 7 adjusted screws to keep it in order to get the accurate test value. You can also fix the test stand on the worktable to make it more steady by using screws holes on the base plate. You can install the test stand as your request when testing. Please refer to the dimension in following picture to install:

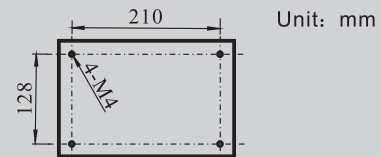

a. Installment by using 4-M4 screw on the base plate.

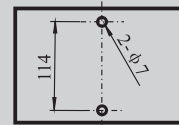


b. Installment by using 2-φ7 holes on the base plate;

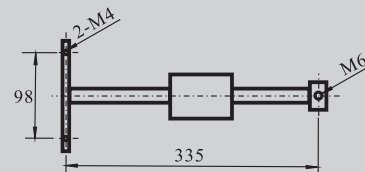


c. Horizontal installment by using 2-M4 screws on the base plate and M6 screw on the beam of test stand;

2.The installation with gauge: install the gauge by rear panel on the stand. Indication picture as follows:

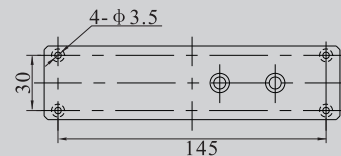

3.The installation of SH/SP push pull force gauge:Take out the 4 pieces of M3\*8 screws from package box. Screwed the force gauge by the hold on rear panel , tighten it. The indication as follows :

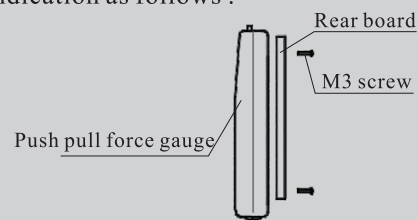

## 4 Measurement

It tests push and pull forces bidirectionally. First put or install the tested sample on suitable position of the working table in accordance with the sample's characteristics, adjust the height and clear to zero of the ruler. Then move the hand wheel of the test stand. The force gauge will move up and down to complete the test. The ruler shows the displacement, the gauge shows the testing force.

## 5 Cautions

1. Do not overload testing capacity, or destroy the stand, the max capacity is 500N. The max displacement is 150mm.
2. Handle carefully when using and carrying.
3. Do not use it near water, oil or others liquid.
4. Clean dirt and dust for gauge with soft cloth. After dipping cloth in the neutral detergent water and squeeze out water for cleaning. Do not use volatile chemical liquid to clean it. Such as benzene, thinner, alcohol etc.
5. Never disassemble, repair and remode the stand by yourself, or it will cause perpetual destroy.
6. If malfunction, please contact original sale department or our factory.

## 6 Packing list

Number	Name	Quantity
1	SLJ -B Main body	1
2	M6×25 Double-head screw	1
3	M6 Nut	1
4	Hook	1
5	Manual	1
6	Certificate	1

**MANUFACTURER: WENZHOU  
SUNDOO INSTRUMENTS CO.,LTD**

Add: Building E, No.10 High-tech Industrial  
Zone, Wenzhou China

Zip: 325013

Tel: +86 577 88609905

Fax: +86 577 88390155

Http://www.sundoo.com

E-mail: export@sundoo.com