

SOUNDTEK

Sound Level Calibrator **ST-120 CLASS 1**

User's Manual



HB2ST1200000



TENMARS ELECTRONICS CO., LTD

Contents:

1. INTRODUCTION.....	2
2. EQUIVALENT FREE-FIELD	2
3. SPECIFICATIONS	3
4. OPERATING INSTRUCTIONS	4
5. CALIBRATION AND ADJUSTMENT	5
6. BATTERY REPLACEMENT.....	5
7. CLEANING.....	6
8. END OF LIFE	6
9. ENVIRONMENT CONDITIONS	6
10.EMC	7
11.ACCESSORIES	7

1. INTRODUCTION

The ST-120, Sound Level Calibrator, is used for the calibration of the pressure sensitivity of the microphone and sound level measuring equipment. The design of ST-120 is based on a feedback arrangement to ensure a high stable sound pressure level. The performance is very stable; it does not required for the revision to the microphone equivalent volume. ST-120 conforms to the standard of IEC60942 (2003) Class 1.

2. EQUIVALENT FREE-FIELD

Usually we use the free-field microphone more than others. For example, when use the ST-120 to calibrate the sound level meter and other environmental noise measuring equipments need to revise the pressure-field to the equivalent free-field. The corrected value is the difference between the pressure-field response and free-field response when at 1000Hz. The value for the 23.77mm (1 inch) microphone is -0.4dB , and for the 12.7mm (1/2 inch) microphone is -0.2dB .

Also the equivalent free-field for the 23.77mm (1 inch) microphone is 93.6dB , and for the 12.7mm (1/2 inch) microphone is 93.8dB .

3. SPECIFICATIONS

- Standard : IEC 60942(2003) and ANSI S1.40. (1984)
- Sound Pressure Levels : 94 and 114Db.
(reference of $2 \times 10^{-5} \text{Pa}$) .
- Accuracy : $94 \pm 0.3 \text{dB}$ and $114 \pm 0.5 \text{dB}$.
- Frequency : $1000 \text{Hz} \pm 1\%$.
- Distortion : $\leq 3 \%$.
- Battery : 9V 006P or IEC6F22 or NEDA 1604.
- Dimension : $\varphi 62 \times 134$ (mm) .
- Weight : about 350g (included 1/2" adaptor and 9V battery) .
- Stable Times : 20s.
- Operating Temperature : $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ ($32^{\circ}\text{F} \sim 104^{\circ}\text{F}$).
- Storage Temperature : $-10^{\circ}\text{C} \sim 60^{\circ}\text{C}$ ($14^{\circ}\text{F} \sim 140^{\circ}\text{F}$).
- Humidity : $< 90\%$.
- Atmospheric Pressure : $65 \text{KPa} \sim 100 \text{KPa}$
- Accessories : User's manual x1 、 Calibration certificate x1

4. OPERATING INSTRUCTIONS

1. Insert the 1/2 inches microphone to the hole of ST120 Sound Calibrator until you hear a "click" sound. (refer to Fig. 1)
2. Select output dB level and turn on power, LED will be lightened and the meter emits a sound.
3. Read the value on the sound level meter's display and perform the calibration
4. Extract the microphone.



Fig. 1

5. CALIBRATION AND ADJUSTMENT

If calibration out of specification, you can calibrate and adjustment it:

1. Unscrew completely the metal silver battery cover.
2. Uses a small screw driver trimming interior variable resistor(VR1) until attain a designated standard the accurate 94dB normal value.

CAUTION



When verification should use the pressure field response laboratory scale microphone as well as the precision measurement amplifier carries on the measuring. Does not need to 114.0dB to carry on the adjustment.

6. BATTERY REPLACEMENT

CAUTION




The battery voltage should maintain more than 7V,when the LED flash, please change battery soon.

CAUTION



If you not use this product for a long time , please remove battery

1. Unscrew completely the metal silver battery cover.
2. Remove the battery.
3. Replace the battery with a new one of the same type.

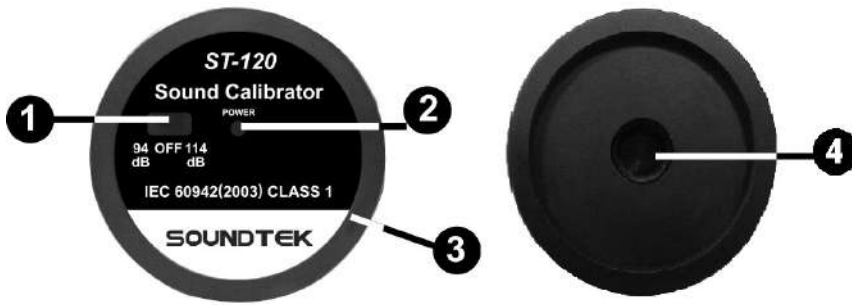

Description Of Calibrator

1. Power & output level select switch .
2. Low battery indicator .
3. Battery cover.
4. 1/2" adapter.

Fig. 2

7. CLEANING

- To clean the instruments use a soft dry cloth. Never use a wet cloth, solvents or water.

8. END OF LIFE



Caution: this symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal

9. ENVIRONMENT CONDITIONS

- For inside use, max height: 2000m
- Reference temperature: $23^{\circ} \pm 3^{\circ}\text{C}$
- Operation temperature: $5 \sim 40^{\circ}\text{C}$
- Operation humidity: $<80\% \text{ RH}$
- Storage temperature: $-10 \sim 60^{\circ}\text{C}$
- Storage humidity: $<70\%$

10. EMC

This instrument was designed in accordance with EMC Standards in force and its compatibility has been tested in accordance with EN61326-1 (2006).

11. ACCESSORIES

- Meter: ST-120.
- User's manual.
- Carrying case.
- 1 battery 9V 006P or IEC6F22 or NEDA 1604.

TENMARS



Professional Electrical and Environment Test & Measurement Instruments:

Battery Capacity / Impedance Tester/TACHO Meter
LED light meter, Temperature & Humidity meter
Infrared Thermometer, Sound level meter
Light meter, EMF meter, UV Light meter, RF meter
Hot wire Anemometer, CO meter
Anemometer, Lan cable tester, CO₂ meter
Solar power meter, Radiation meter,
Clamp meter, Multimeter
Phase Rotation tester, Digital Insulation tester

**Our products of high quality are selling well
all over the world**

TENMARS ELECTRONICS CO., LTD
6F, 586, RUI GUANG ROAD, NEIHU,
TAIPEI 114, TAIWAN.
E-mail: service@tenmars.com
<http://www.tenmars.com>